

HAMADA RS34 / VS34 Parent, DU34 Upper, Phase II

Frequently Used Part Numbers

Rollers

X07-0143	Form Roller, Soft
X07-0350	Pan Roller, Hard
X07-0444	Oscillator/Bridge Roller, Hard
XSA-070538	Metering Roller Assy., Soft (Roller, shaft, bearings, snap rings, roll pin)
XSA-070533	Lower Intermed. Roller Assy., Hard (Roller, shaft, bearings, snap rings, roll pin)

Side Frames Assemblies

XSA-010153P	OPS Side Frame Assy. (Side frame w/bearings)
XSA-01053N	NOPS Side Frame Assy. (Side frame w/bearings)

Gears

XSA-039901	Idler Gear Assy. (2 per damp.) (Gear, bearing, shoulder bolt)
XSA-03241530	Pan Drive Gear Assy. (Gear w/ clutch bearing)
XSA-03001	Form Drive Gear Assy. (Gear w/ clutch bearing)


Sealed Ball Bearings

X06-113	Sealed Ball Bearing, Side Frame (4 per dampener)
X06-101	Sealed Ball Bearing, Pivot (2 per dampener)

Miscellaneous

XSA-9903	Metering Thumb Screw Assy. (Thumb screw, ratchet gear, set screw)
XSA-1148	Water Pan Assy. (w/ pan bolts)
X99-61	Wash Up Bottle
X88-104	Installation Manual

**FAX YOUR ORDER
TO ACCEL TOLL FREE!
1 (800) 365-6510**

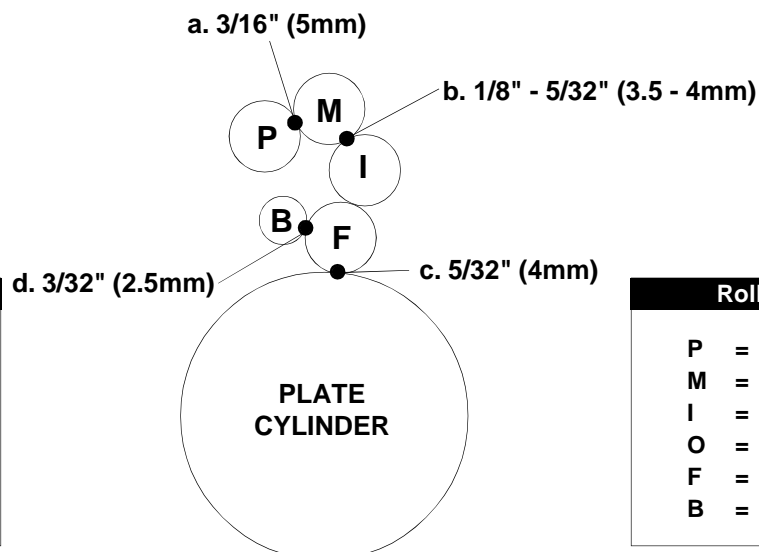

Adjustments

- a. Metering to Pan
- b. Metering to Intermediate
- c. Form to Plate
- d. Bridge to Form

Roller Description

P	=	Pan, Hard
M	=	Metering, Soft
I	=	Intermediate, Soft
O	=	Oscillator, Hard
F	=	Form, Soft
B	=	Bridge, Hard